

Please use this manual change for the manuals as listed below.

### 1. Applicable User's Manuals

IM No.	Edition	Products
IM01W03D01-01EN	6	FN310 Field Wireless Multi-Protocol Module (HART Protocol)
IM01W03D02-01EN	4	FN310 Field Wireless Multi-Protocol Module (RS485 Modbus Protocol)
IM01W03E01-01EN	4	FN510 Field Wireless Multi-Function Module
IM01W03E03-01EN	2	FN510 Field Wireless Multi-Function Module (Accelerometer Input)

### 2. Contents of change

Following items are changed. Strikethrough or underline is added to the changed part.

#### ● 5.5 Grounding



#### IMPORTANT

Proper grounding is necessary to maintain the function and performance of this product. When the grounding is inadequate, the equipment may be damaged.

Refer to TI 01W01A58-01EN for details of grounding method and precautions.


- Use a grounding cable of AWG 14 (2 mm<sup>2</sup>) or more between the grounding electrode and the grounding terminal of this product, and connect with the shortest route.
- Select the grounding cable that has a structure of adequately protects against mechanical damage, chemical or electrical degradation, electrodynamic force and thermodynamic force for connection of the grounding electrode and the ground terminal of this product.

#### ● 8.3 Replacing the Battery Pack



#### WARNING

- To ensure the installation minimizes the risk from electrostatic discharge.  
To prevent electrostatic discharge caused by static charge built up on the operator, ground the operator through conductive shoes and floors and by wearing anti-static work clothes to prevent charge build-up.  
Avoid any actions that cause the generation of electrostatic charge, such as rubbing surface of Battery Pack and product with a dry cloth.  
If static electricity cannot be suppressed, check that the surrounding atmosphere does not contain explosive gas or steam before replacing the Battery Pack.
- Be sure to use a battery pack that is indicated as "Rev.1" or higher for explosion protected instruments

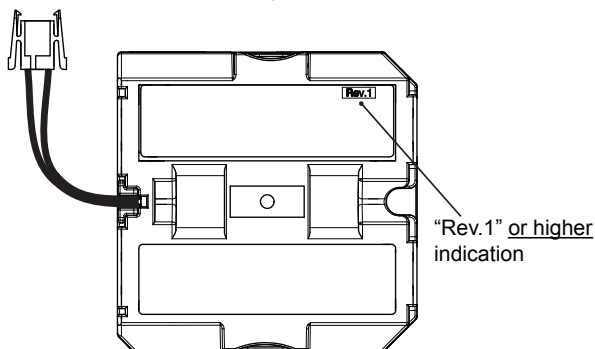

F0801.ai